




the best regional partners

E220 Jumper setting guide

Garcia.Huang


2013/11/

E220 Board view

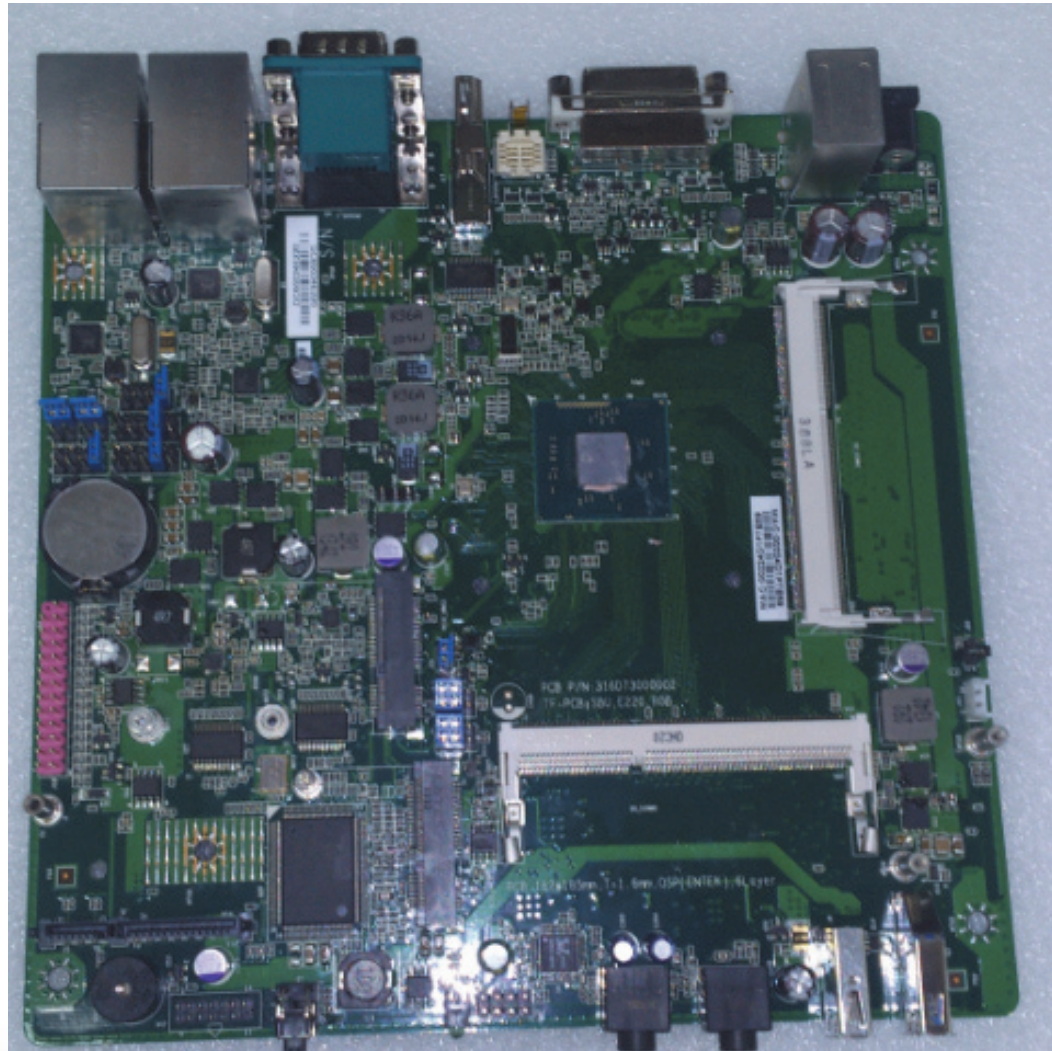

E220 Board view

COM Port2

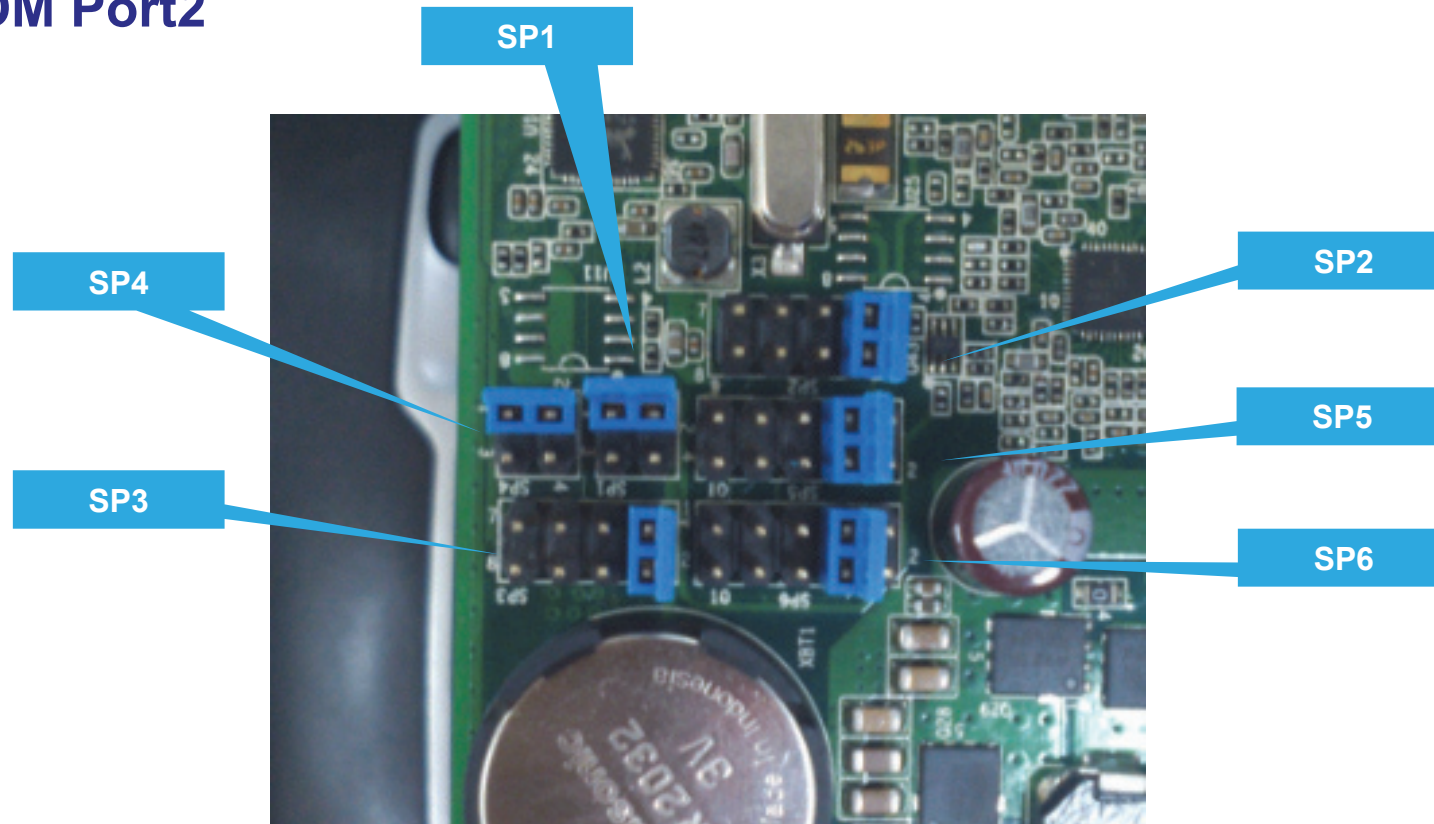



COM Port2 setting

PIN	COM2 (Default)	COM2 (User define)
1-SP1	DCD(1-2)	DCD(1-2) / +5V(3-4)
2-SP2	RXD(1-2)	RXD(1-2) / TXD(3-4) / RXD(TTL)(5-6) / TXD(TTL)(7-8)
3-SP3	TXD(1-2)	TXD(1-2) / RXD(3-4) / TXD(TTL)(5-6) / RXD(TTL)(7-8)
4-SP4	DTR(1-2)	DTR(1-2) / +5V(3-4)
5	GND	GND
6	DSR	DSR
7	RTS	RTS
8-SP5	CTS(3-4)	RXD(TTL)(1-2) / CTS(3-4) / RXD(5-6) / TXD(7-8) / TXD(TTL)(7-8)
9-SP6	RI(3-4)	TXD(TTL)(1-2) / RI(3-4) / TXD(5-6) / RXD(7-8) / RXD(TTL)(7-8)

E220 Board view


MSATA

MiniPCle

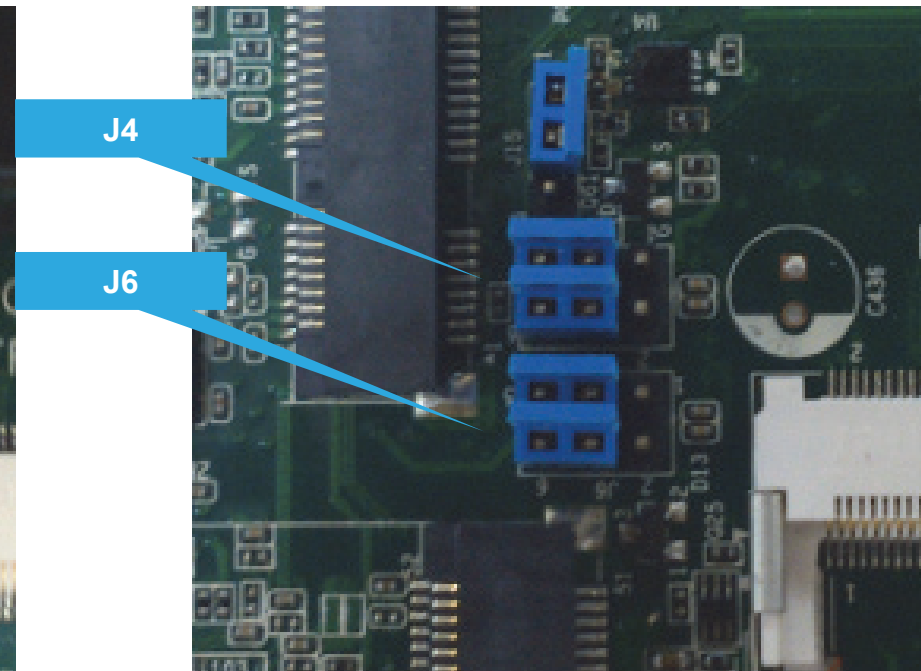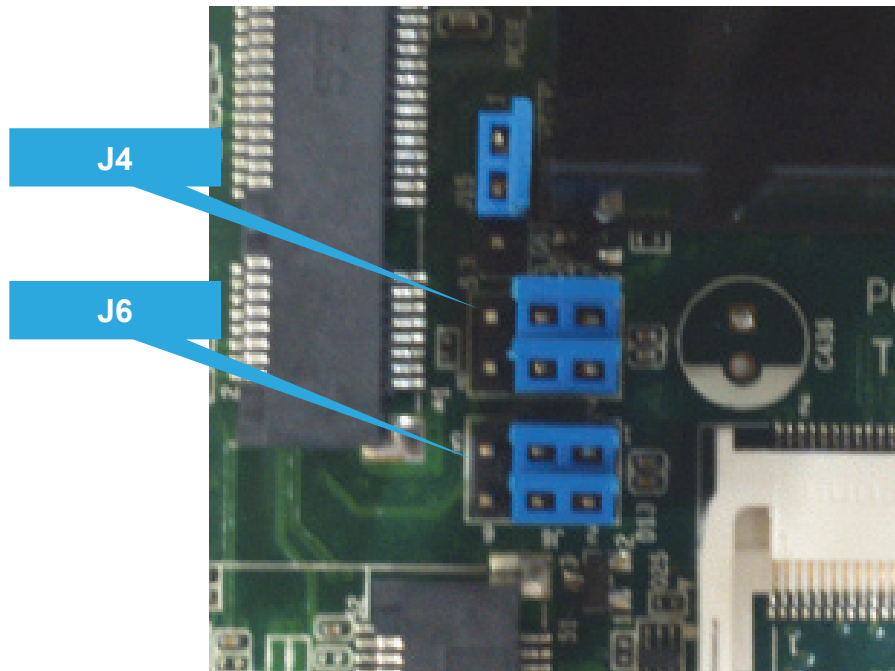


E220 Board view

CMOS clear (J7)

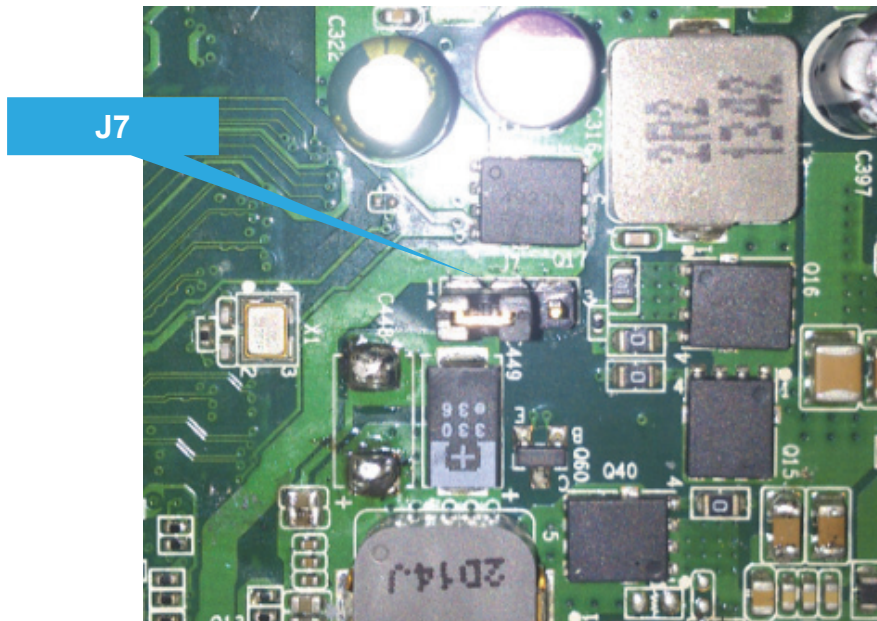

**Normal 1-2 (Default)
CMOS clear 2-3**

Deep Sleep (J26)

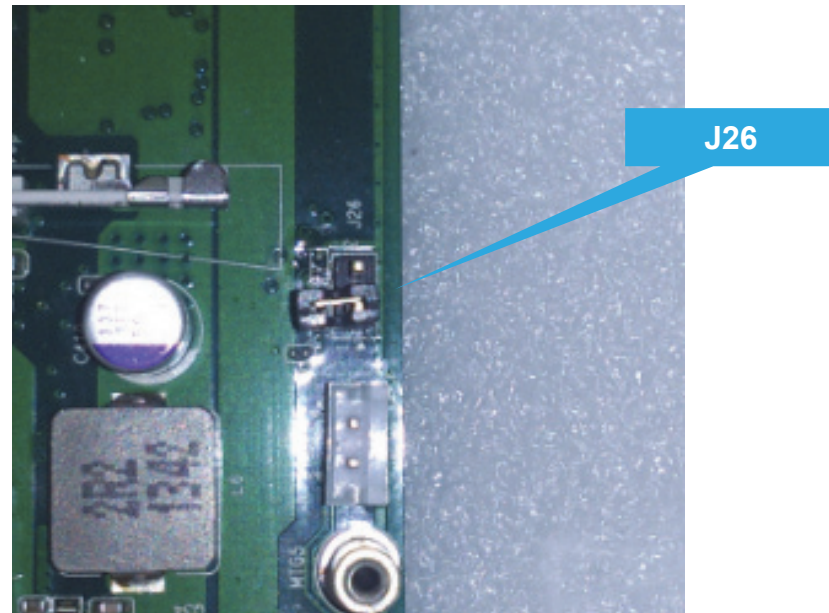

**Normal 1-X (Default)
Deep Sleep enable 1-2**